
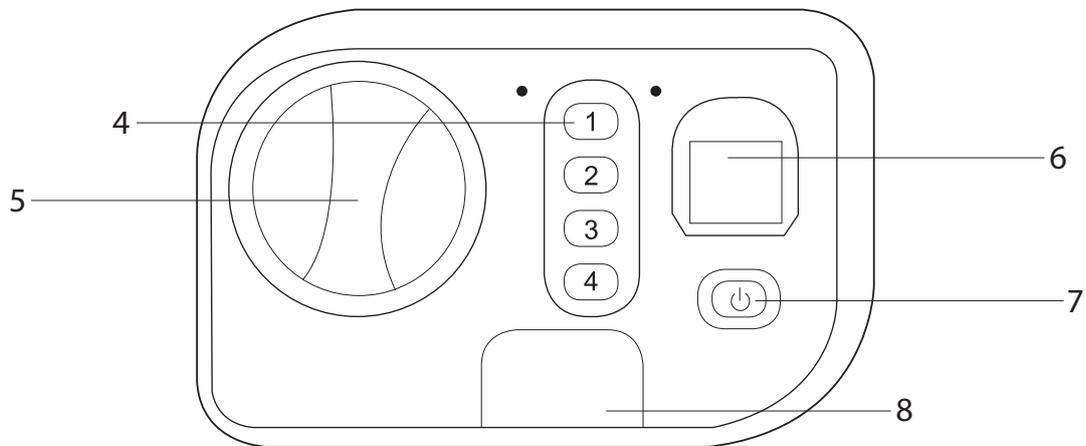


FINGERPRINT SAFE INSTRUCTIONS

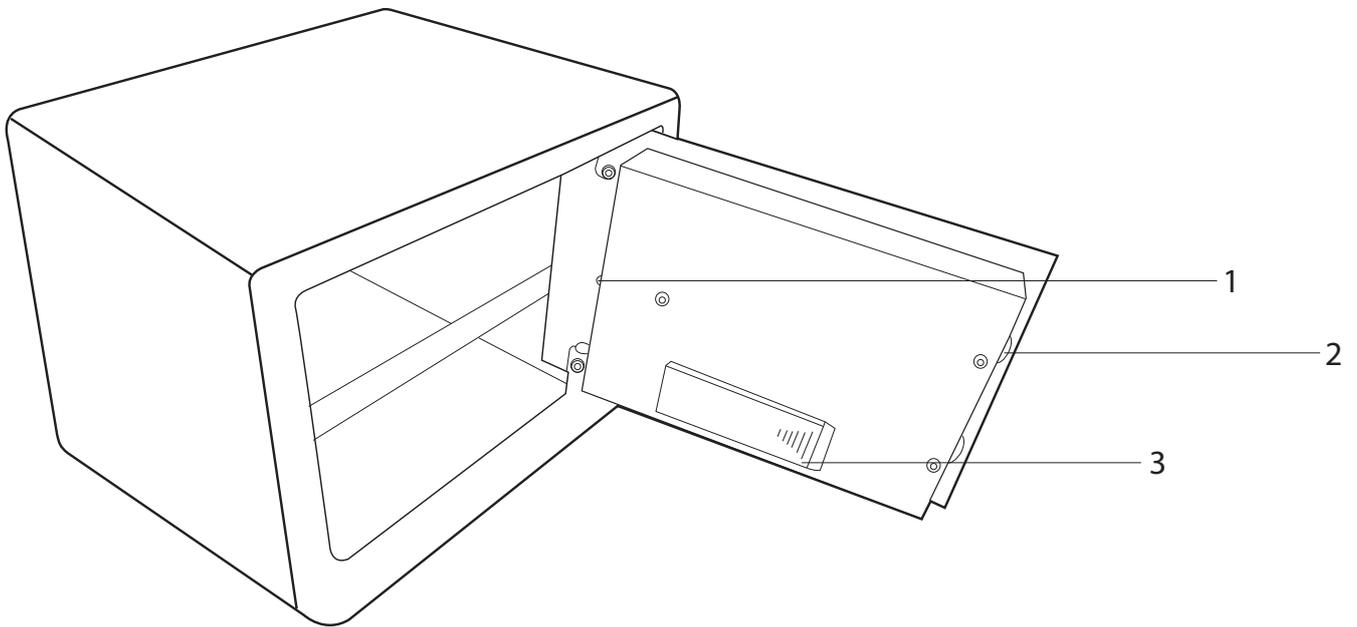

- | | |
|------------------------|-----------------------|
| 1. Registration Button | 5. Door Handle |
| 2. Locking Bolts | 6. Fingerprint Screen |
| 3. Battery Compartment | 7. Unlock Button |
| 4. Number Panel | 8. Emergency Cover |

! Do not store emergency keys inside your safe!

PROGRAMMING YOUR SAFE

Batteries

1. Remove the emergency cover and insert the emergency key.
2. Turn emergency key clockwise and hold.
3. Turn door handle clockwise and pull the door open.
2. Insert 4 x AA batteries into the battery compartment.

When replacing batteries in the future, it is best to use heavy duty alkaline AA batteries.

Fingerprint Registration

Program your fingerprint by following these steps:

1. Press the registration button.

Two short 'beeps' will sound and the fingerprint screen will light up red.

2. Put your finger on the fingerprint screen.

If the fingerprint is registered successfully you will hear two short beeps followed by a long beep.

(If the fingerprint registration is unsuccessful you will hear three short beeps.)

You can register up to 20 fingerprints.

Program User Code

This safe comes programmed with a preset factory code - 1 2 3 4

For security purposes you will need to change this to your own personal code by following these steps:

1. Press and hold the number "1" on the number panel for around five seconds. The green indicator light will turn on.
2. Input the preset factory code (1 2 3 4) followed by the unlock button. A beep will sound.
3. Input your own personal code (4-8 digits) followed by the unlock button.
4. Input your own personal code again to confirm, followed by the unlock button. A beep will sound, confirming that your new user code has been set.

Your safe is now ready to use.

If you wish to program more fingerprints or change the user code, simply follow the steps again.

Restore to Factory Settings

If you ever wish to return the safe back to its original factory settings:

1. Press and hold the registration button. The green indicator light will flash 15 times followed by one more flash and a long beep.
2. Let go of the button.

All stored fingerprints will now be erased and the user code will have reverted to the preset factory code (1 2 3 4).

USING YOUR SAFE

You will now be able to unlock and open your safe using your fingerprint or by entering your user code.

Open Safe with Fingerprint

1. Press the unlock button.


The fingerprint screen will light up red.

2. Put your finger on the fingerprint screen until it is granted or denied access.

If the fingerprint is recognised, the green indicator light will show and a long beep will sound. You can now turn the door handle clockwise and open the safe.

(If the fingerprint is not recognised, the indicator lights will flash and the safe will beep three times. You will not be able to open the safe).


Correct

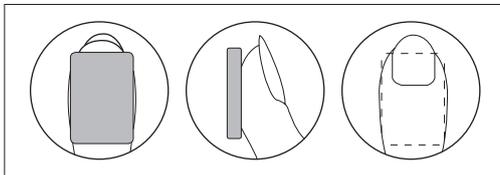

Tips for using the fingerprint screen:

- Fingerprint screen may not read if it is under very bright light
- Each user should register 2-3 different fingerprints
- Women and children should register with their thumb or middle finger
- Press your finger down evenly and gently
- If encountered with very dry weather, breathe on finger to make a little moist

Incorrect

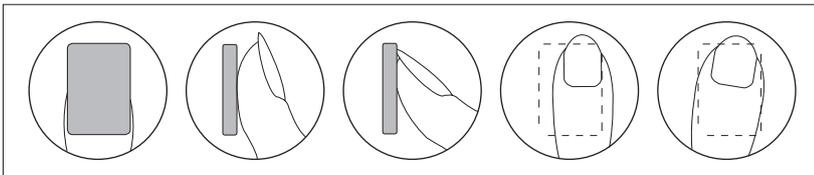

Open Safe with User Code

1. Input the user code followed by the unlock button.

If the code is entered correctly, the green indicator light will show and a long beep will sound. You can now turn the door handle clockwise and open the safe.

(If the code is entered incorrectly, the indicator lights will flash and the safe will beep three times. You will not be able to open the safe).

Emergency Key

The emergency keys are provided for:

- initial entry to the safe.
- a means of access if the batteries go flat.
- a means of access if you forget your user code.
- a means of access if your fingerprint can not be recognised.

They should not be used for everyday access.


Responsibility will not be taken if the user misplaces the emergency keys.

Store these keys in a safe place but NOT inside the safe!

INSTALLING YOUR SAFE


For installation into concrete surfaces use masonry bolts provided.

1. Install your safe in a location that is secure and sturdy.
2. Drill holes for 12mm masonry bolts in the desired location.
3. Insert the masonry bolts through the holes in the safe and into the concrete.
4. Tighten masonry bolts using a 12mm socket or spanner.

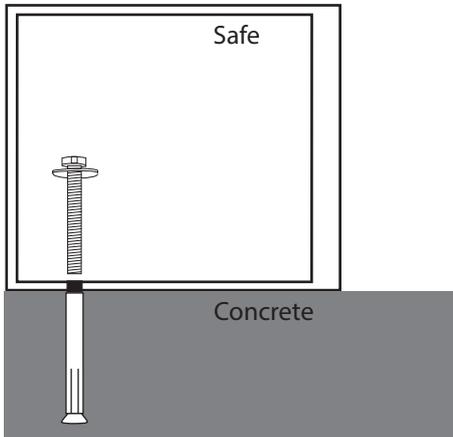

For installation into timber surfaces use coach screws (not included).

1. Install your safe in a location that is secure and sturdy.
2. Pre-drill holes in the desired location.
3. Insert the coach screws through the holes in the safe and into the timber.
4. Tighten coach screws using a socket or spanner.

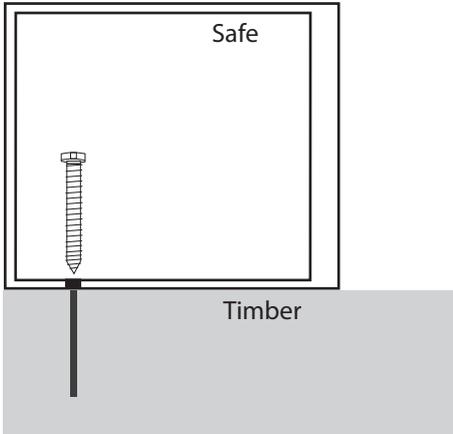

All safes should be bolted down to ensure the best possible security.

OTHER NOTES

- If you wish to clean your safe, use a damp cloth. Do not use liquid or sprayers.
- Never try to dismantle the product by yourself.
- Safe must be installed in an upright position or the warranty shall be void.

A safe is an aid only in reducing theft, it must form only a part of a range of security measures used. Sandleford Hardware (distributor of Karbon Safes) will not accept or be held responsible for any loss or damage caused in the event of theft or unauthorised use.

Ph (03)9786 0055