


Installation Instructions

Fixing to brick:

Mark holes, drill 4 x 6mm holes, insert wall plugs.


Insert screws into back panel & screw into wall plugs.

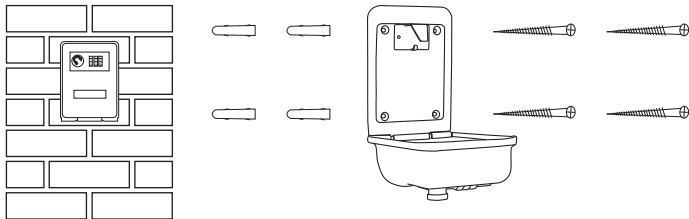

Fixing to timber fence:

Mark holes, drill 4 x 2mm pilot holes.

Insert screws into back panel & screw into wall plugs.

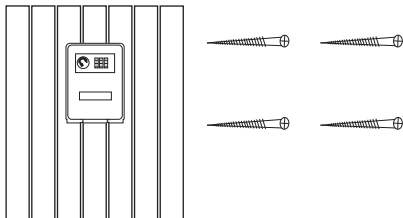


COMBINATION CODE LOCK INSTRUCTION HOW TO SET YOUR OPENING COMBINATION


You can set your own personal combination by following these instructions:

The opening combination is preset at 0-0-0-.

1. Turn the dials to the preset combination 0-0-0-.
2. Move the reset button to position **B** as shown in picture 1.
The reset button is inside the cash box on the back of the lock mechanism.
3. Turn the dials to set your desired combination, and write down immediately, so you don't forget.
4. Move the reset button back to position **A** as shown in picture 2.
The lock will now open to your own combination.
To change your combination repeat steps 1-4 above.

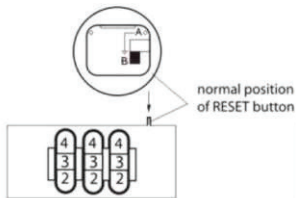

Picture 1

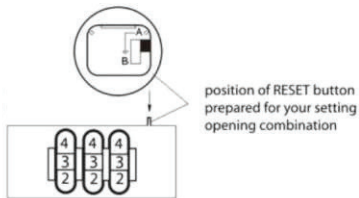

Picture 2