

THIS PRODUCT IS ONLY FOR PRIVATE USE AT HOME AND MUST NEVER BE USED IN PARKS AND PUBLIC GARDENS, IN SCHOOLS, CAMP SITES, HOTELS, PUBLIC LEISURE AREAS, ETC.
EXCLUSIVELY FOR DOMESTIC OUTDOOR USE
TO BE RETAINED FOR FUTURE REFERENCE

SWING
SLIDE
CLIMB

Baby Swing Seat

With Height Adjustable Ropes




SUITABLE FOR AGES UNDER 36 MONTHS
DISTRIBUTED BY SOUTH EARL PTY LTD
Warning: Only for domestic outdoor use
Made In China

COVER

DIMENSIONS: 204 X 142 MM


ASSEMBLY INSTRUCTIONS

SAFETY AND MAINTENANCE
All the hooks, rings and cords should be checked regularly and all the parts that are under constant friction should be greased. Should this control not be carried out, then the apparatus could deteriorate and become prone to overturning or collapse. This product must only be assembled and adjusted by an adult and used under adult supervision. It contains small parts that can be easily inhaled or swallowed. The manufacturer declines all responsibility for accidents occurring should the above recommendations not be observed.
ATTENTION : Modification made by the consumer to the original activity toy (for example the loading of an accessory) should be carried out according to the instruction of the manufacturer. These products satisfy all the requirements of the standard EN 71. This product must be used by children under 36 months. It is only for children with a 25 kg maximum weight. It is advised to remove the apparatus during the winter period when not in use.

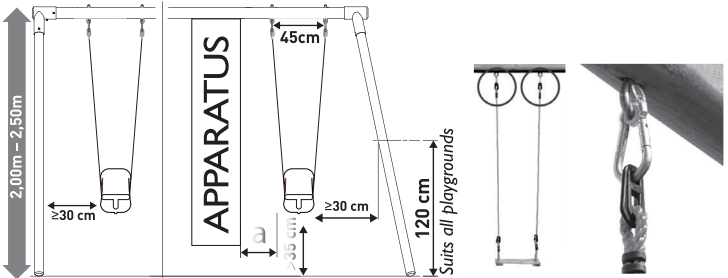


ENSURE SAFE PLACEMENT OF YOUR INSTALLATION

Place your swing on a level surface at least 2m from any structure. The swing must not be set up on hard surfaces (concrete asphalt or any other hard surface). If your baby seat is placed next to a free sways element (rope, rope ladder...) then $a = 45\text{ cm}$. If your baby seat is placed next to stiff suspension element (double swing, see-saw...) or next to a semi flexible element (swing, trapeze...) then $a = 30\text{ cm}$. It is not recommend to turn the swing towards the sun.

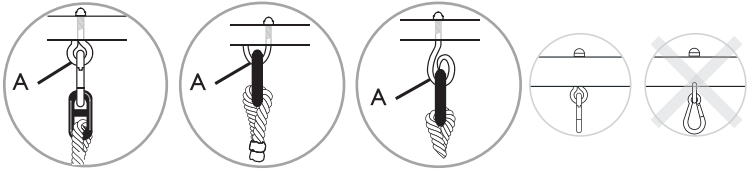

FIXING INTO PLACE

The Hook should be positioned so that when viewed from the front, the eye of the hook is clearly visible (A), and the hook on the end of the rope should be perpendicular to it. This should allow the apparatus to swing in the correct motion. Any incorrect assembly of the hook will result in an abnormal swinging motion. If any modifications are made by the consumer to the original apparatus, they should be carried out according to the instructions of the manufacturer. The hook assembly should be checked regularly, as a bad installation may cause the parts in contact to wear/break. It is strongly advised to perform monthly checks on the state of the hook to make sure that it is in good working operation. If any damage is found, the damaged parts should be replaced immediately. As soon as the metal part shows through the plastic ring on the upper fixing of your swing, the swing has to be replaced.

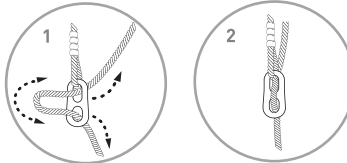

ADJUSTING THE HEIGHT

The height of the swing can be adjusted using the plastic eyelet fixture. By pulling the rope through the fixture, the height of the seat can be adjusted to suit the user.

1. SLIDE THE ROPE INTO THE RING

2. THE LOCKING OF HEIGHT WILL BE AUTOMATICALLY DONE WHILST SIZE HAS BEEN ADJUSTED

INNER PAGE

DIMENSIONS: 204 X 142 MM