

KEY SAFE INSTRUCTIONS

ATTENTION

Please read the operating instructions carefully before you operate the lock or try to set a new combination of numbers. We can not accept any liability for malfunction due to the setting of the combination being carried out incorrectly. We can not accept any liability for any damage or for loss of property. The product is used entirely at the owner's risk.

FIRST OPENING


1. Slide the Shutter Door to reveal the dials and Open Latch
2. Rotate the dials to the pre-set factory combination 0-0-0-0
3. Push the Black Open Latch downwards
4. Pull the door fully open

Push the
Black Open
Latch
downwards



SET YOUR CODE

1. Open the Key Box (refer instructions above)
2. Choose your 4 digit code
3. With the Key Box Internal Door facing you (the Reset Button should be on the Right Side), push the RESET Lever on the back of the door to the left and downward

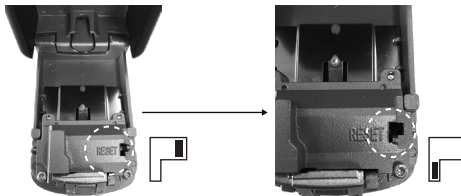

Right Side

Left and Downward

4. Rotate the dials to your desired combination – Ensure they are aligned correctly so the code is entered accurately
5. Push the RESET Lever upward and to the right (Back to its original position. Check the Lever is fully back to its original position and it is flush against the side.
6. Close the door
7. Test your code is set correctly by pushing the Black Open Latch Downwards to open

LOCKING YOUR SAFE

1. After closing your safe door (as above) you lock the safe by spinning the dials to different numbers than your set code.
2. Test the Safe is locked by pulling the Black Latch downwards – if locked it will not move downwards and the door cannot be opened.

OPENING YOUR SAFE

1. Rotate dials to your set combination
2. Push the Black Open Latch downwards
3. Pull the door fully open

Important

1. Keep the Shutter Door Closed to protect against weather
2. We do not recommend setting codes such as 1-2-3-4 or 2-2-2-2 Random codes will provide greater security
3. It is recommended to rotate the dials weekly to keep them moving freely




WALL-MOUNT KEY SAFE KSS122



INSTALLING YOUR SAFE


FIXING TO BRICK

Mark holes, drill 4x6mm holes, insert wall plugs.
Insert screws into back panel & screw into wall plugs.

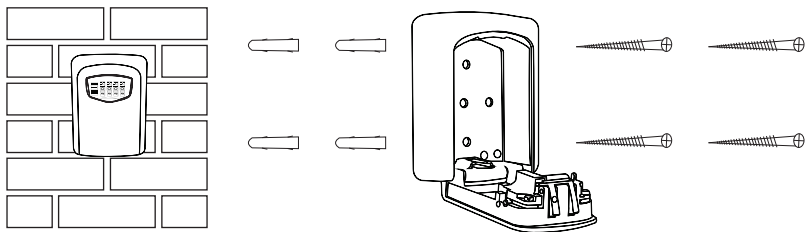

FIXING TO TIMBER FENCE

Insert screws into back panel & screw into wall plugs.

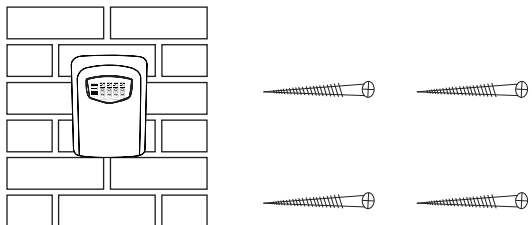

Sandleford Holdings will not accept
or be responsible for any loss or
damage caused in the event of theft
or unauthorised use"

Tel 03 97860055



PARTS LIST

