


Malibu

INCLUDED PARTS

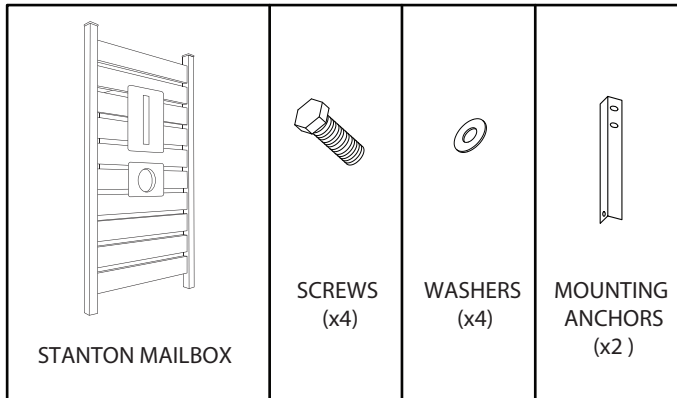

INSTRUCTIONS

STEP 1

Choose an appropriate place to mount your mailbox.

STEP 2

The mounting anchors are screwed into the bottom of the legs. Unscrew these and refix them so that they extend from the bottom of the steel legs.

STEP 3

Hold the frame in place and mark the ground where you will need to dig holes.

STEP 4

Dig 2 holes to suit the vertical posts.

STEP 5

Place the frame into the ground and pour ready mix concrete into the 2 holes.

STEP 6

Level the frame and allow the concrete to set.

