


Letterbox Installation Instructions

Concreting The Letterbox Into The Ground

1. Dig a hole that is roughly 30cm deep and 25cm wide.
2. Mix up concrete and pour into hole so that the concrete is roughly 10cm deep. Place the letterbox on top of this layer and fill the remainder of the hole with concrete. You only need about 20cm of the post in the concrete.
3. While the concrete is still wet, check that the post is vertical.
Clean any concrete from the post using a damp cloth.

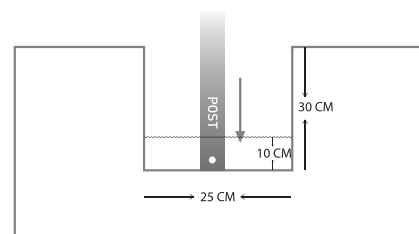

Letterbox Location

Australia Post prefers that the letterbox is facing the footpath and that the mail slot is between 90cm and 120cm from the ground. The letterbox must be located within the boundary line of your property.