



How to install Pillar Mail box


Step 1
Place base frame in desired location.
Make sure that it is level, to ensure mailbox will be straight.

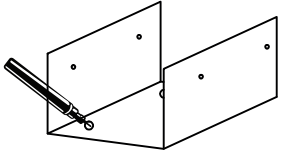


Step 2
Using a pencil mark out the 4 holes of the base frame onto the concrete.

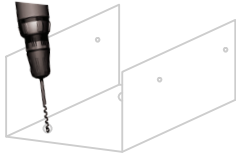


Step 3
Take base frame away and pre-drill holes using a 12 mm masonry drill bit.

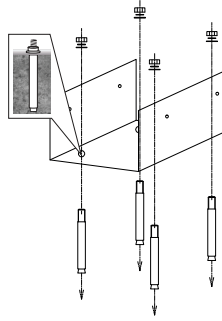

Step 4
Position base frame, insert the dynabolts into the 4 holes and secure by tightening.

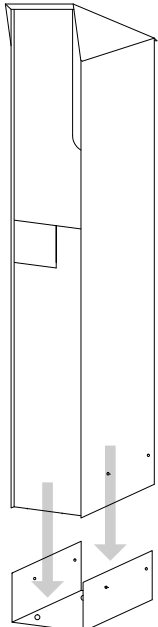


Step 5
Place body of mailbox onto the frame

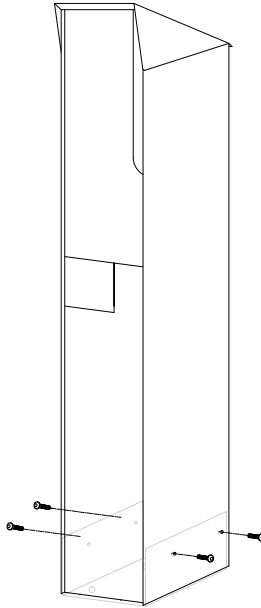


Step 6
Attach using the bolts provided. Place drip tray inside of the letterbox.


Aurora Pillar Mailbox Instructions

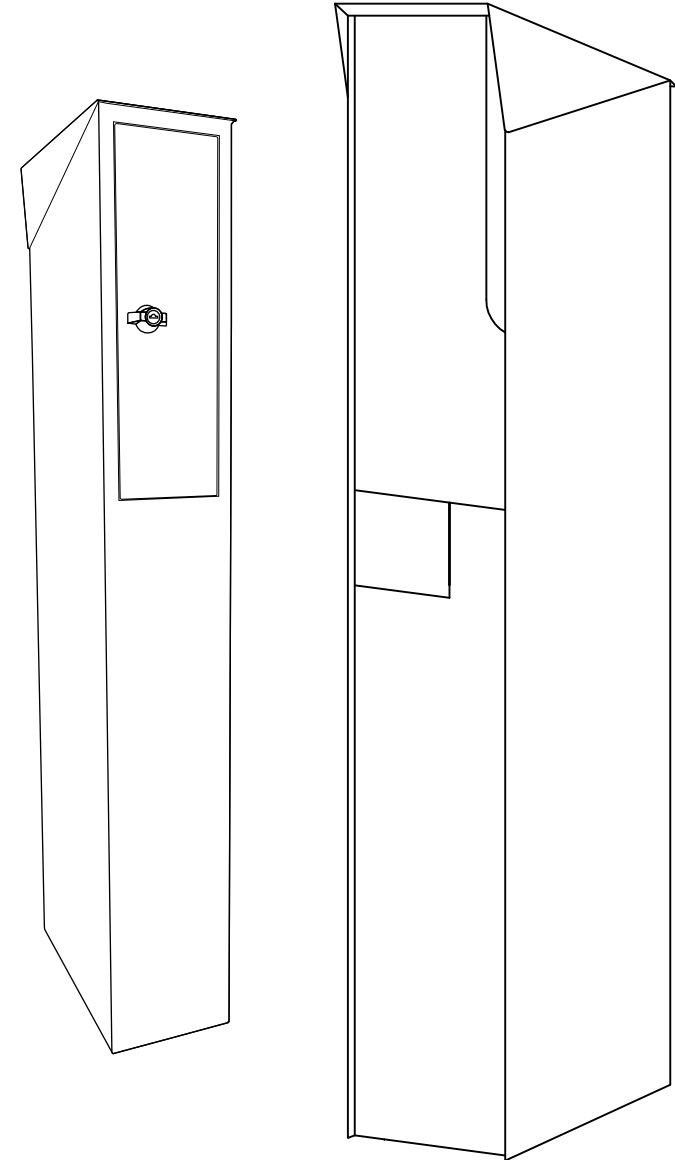


Aurora Included parts

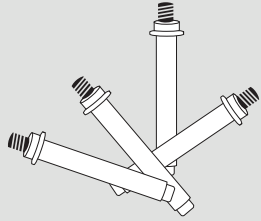


4 DYNA BOLT

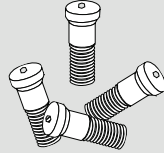


4 SCREWS

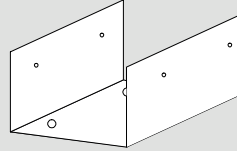

1 BASE FRAME

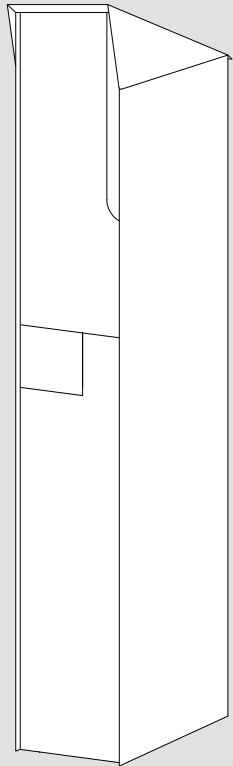

1 BODY

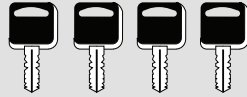

4 KEYS




1 ALLEN KEY


It is recommended to fix the Aurora pillar mail box to a concrete base (or similar)

Options for your base

1. Concrete pad base

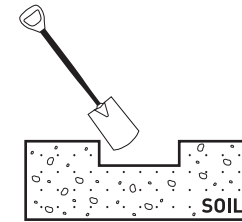


Dig a hole for the size of Concrete pad

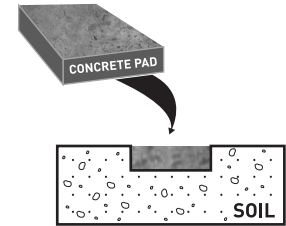


Seat concrete pad level


2. Building your own base

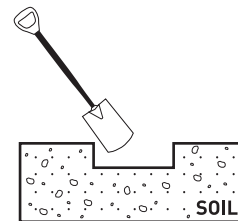

Dig a hole

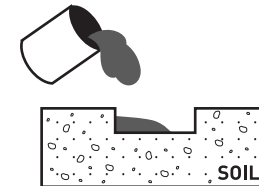

Pour mixed quick set concrete

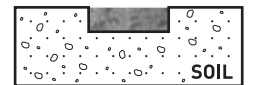

Allow to set