

*POST
LETTERBOX*

INSTRUCTION

MARCO STAINLESS STEEL POST MAILBOX

BUZP01

SYLVESTER STAINLESS STEEL POST MAILBOX

BUZP02

MIGUEL RAW STEEL POST MAILBOX

BUZP03



MARCO




SYLVESTER




MIGUEL

MARCO

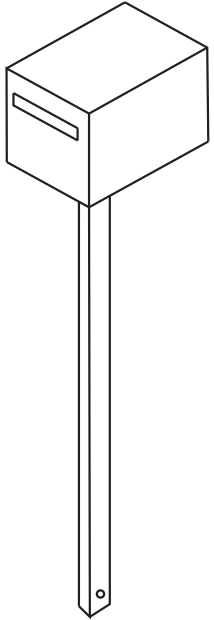


LETTERBOX
WITH POST



STEEL ROD
φ6x120 MM

SYLVESTER

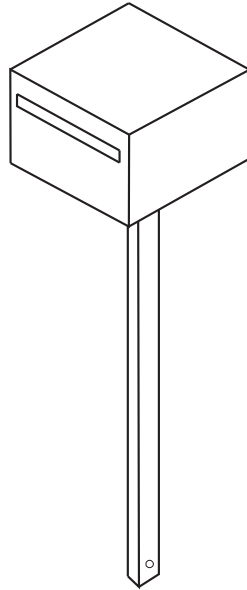


LETTERBOX
WITH POST



STEEL ROD
φ6x120 MM




MIGUEL

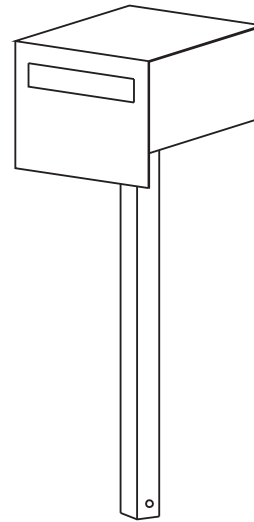

LETTERBOX
WITH POST



STEEL ROD
φ6x120 MM

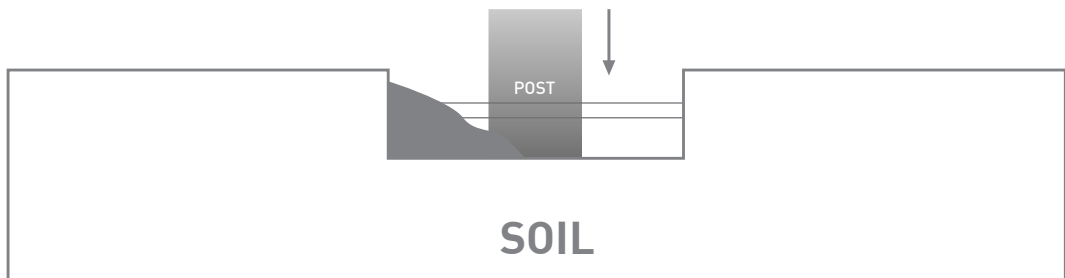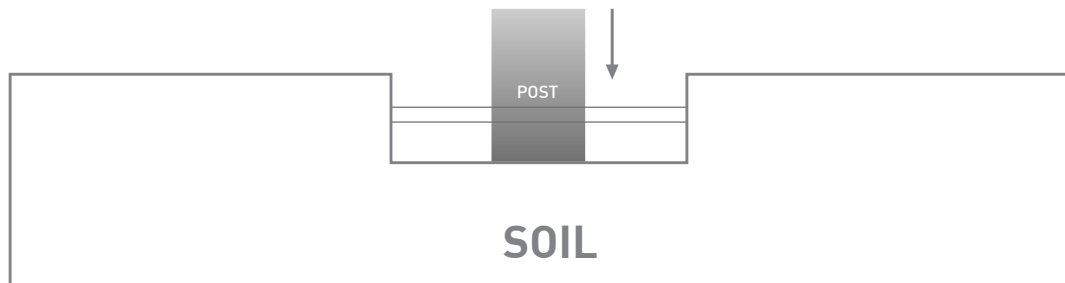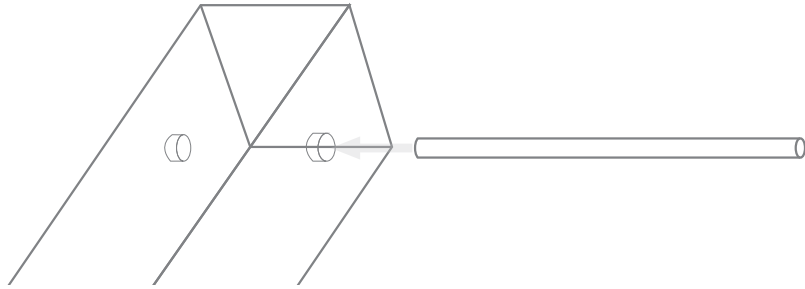

MARCO/SYLVESTER/MIGUEL

STEP 1
Put steel rod through holes in the post.

STEP 2
Dig hole to minimum 275mm

STEP 3
Place post in hole

STEP 4
Fill hole with ready mix concrete & allow to set
(tip: use a spirit level to ensure post is straight)