





Millenium Included parts

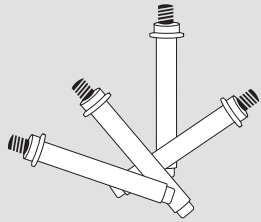


4 DYNA BOLT

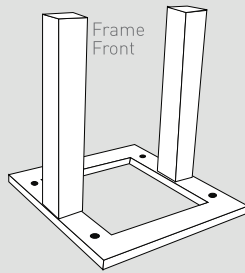



1 BASE FRAME

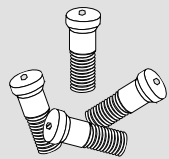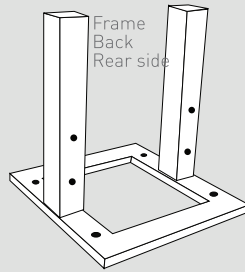

4 SCREWS

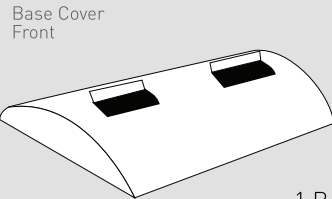


1 BASE COVER

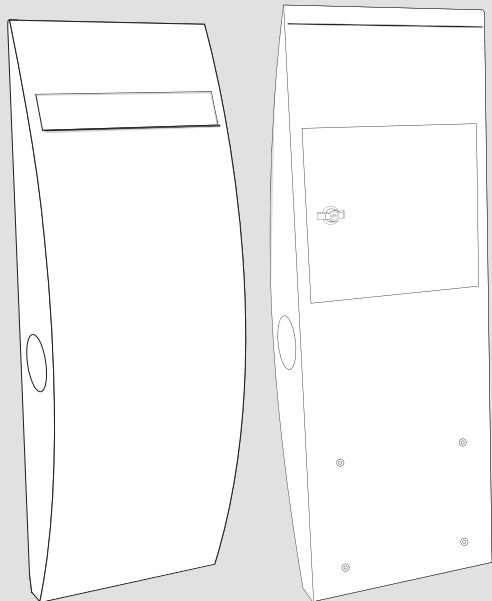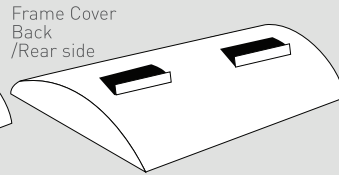

Body Front

1 BODY


Body Back



4 KEYS



1 ALLEN KEY

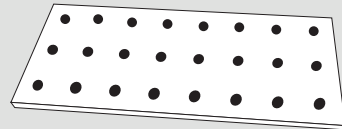


1 DRIP TRAY


It is recommended to fix the Millenium pillar mail box to a concrete base (or similar)

Options for your base

1. Concrete pad base

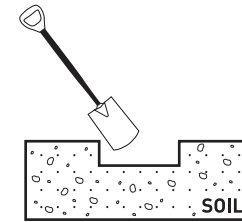


Dig a hole for the size of Concrete pad

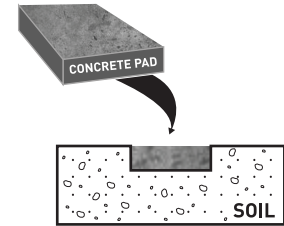


Seat concrete pad level


2. Building your own base

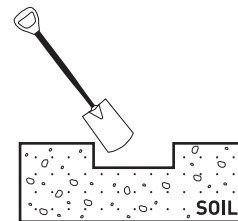

Dig a hole

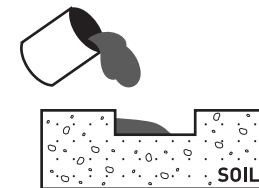


Pour mixed quick set concrete

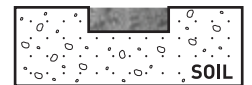


Allow to set

How to install Pillar Mail box


Step 1
Place base frame in desired location.
Make sure that it is level, to ensure mailbox will be straight.

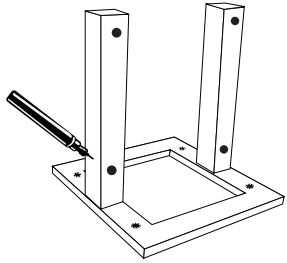


Step 2
Using a pencil mark out the 4 holes of the base frame onto the concrete.

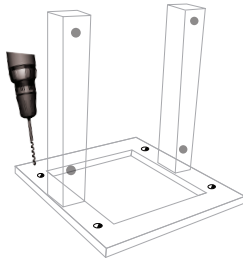


Step 3
Take base frame away and pre-drill holes using a 12 mm masonry drill bit.

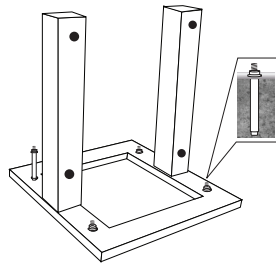

Step 4
Position base frame, insert the dynabolts into the 4 holes and secure by tightening. Holes on the upright of the frame should be on the rear side.

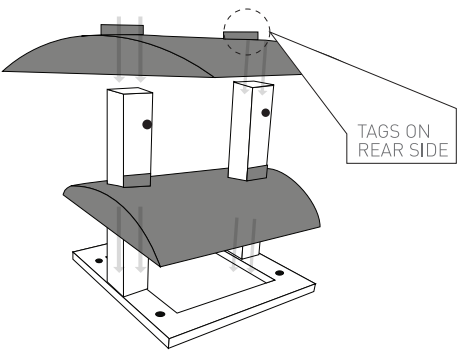

Step 5
Place base cover over frame.

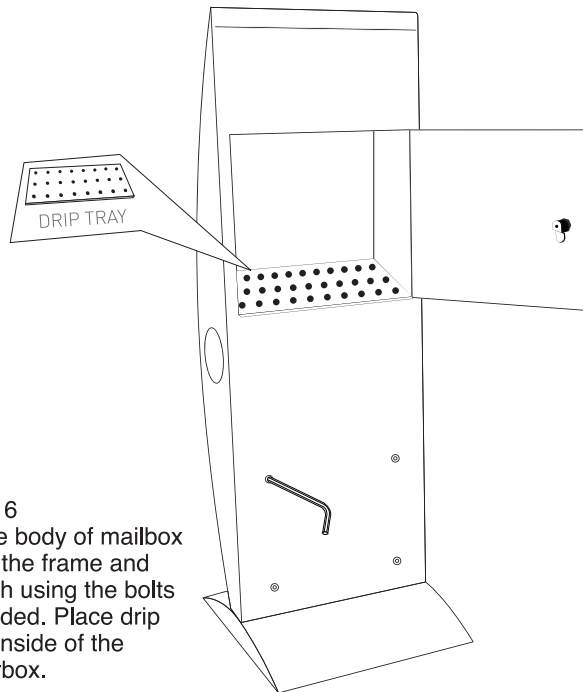

Step 6
Place body of mailbox onto the frame and attach using the bolts provided. Place drip tray inside of the letterbox.

Millenium Pillar Mailbox Instructions

