Sandleford

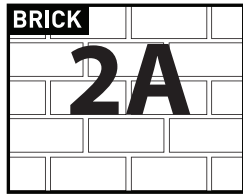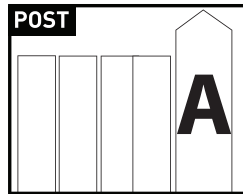# Numeral Instructions

Concealed Fixing

BRICK 2A

- Mark and drill 2 x 6mm holes.
- insert plugs, screw pins into numeral.
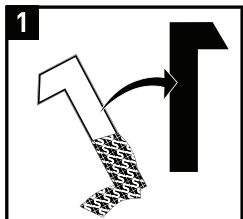- Press firmly home.

FENCE 2A

- Mark and drill 2 x 3mm holes.
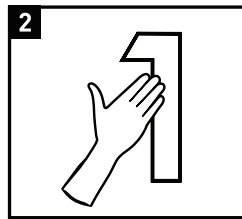- Screw bolts into numeral.
- Fix using nuts and washers.

POST A

- Mark and drill 2x3mm holes.
- Screw pins into numeral.
- Press firmly home.

Stick On Type 1
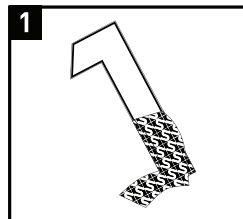**(Numerals comes with seperate adhesive)**

1

- Remove protective paper from one side of the sticker paper carefully.
- Align and attach to rear of numeral, press firmly.
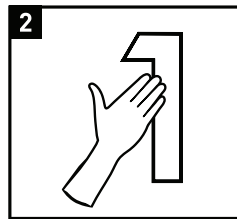
2

- Make sure the surface is clean and dry.
- Remove protective paper.
- Align your numeral.
- Press it down firmly.

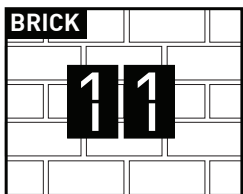## Stick On Type 2
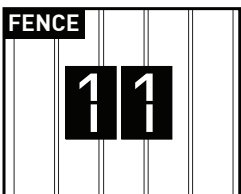**(self-adhesive numerals)**

1

- Peel off protective backing.

2

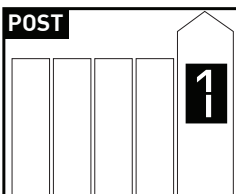- Make sure the surface is clean and dry.
- Align your numeral, press firmly.

Floating Stud Mount

BRICK 11

- Mark and drill 2x8 mm holes, insert plugs, screw pins into numeral.
- Press pins into plugs.

FENCE 11

- Mark and drill 2x5 mm holes.
- Screw bolts into numeral fix using nuts and washers.

POST 1

- Mark and drill 2x8 mm holes.
- Insert plugs, screw pins into numeral.
- Press pins into plugs.

Screw On

- Mark holes.
- Drill 2 x 1mm.
- Pilot holes.
- Fix using screws.